

Selecting a Zone and Mode


A mode is a channel or talkgroup and all features slaved to it. A zone is a grouping of modes that can be selected either through the 3-position toggle switch, or via the keypad. Follow these three easy steps to find a desired zone and mode.

Step:

1. Press the left button key (single dot)
2. Press the right arrow of the four way position switch. Keep pressing this key until the desired zone appears.
3. Press the Home button to select.

SEE FIG-1 BELOW:

Zone Selection

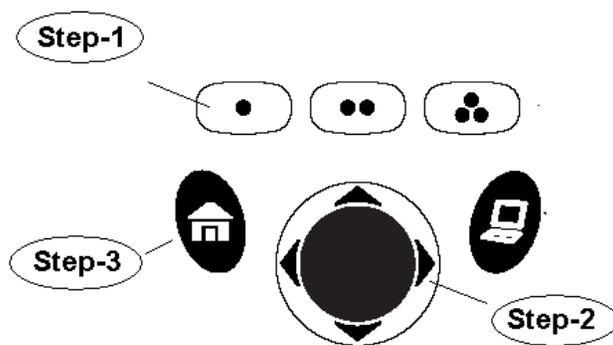

XTS 5000 Handheld

SmartZone Backup Operations

A).Radio operation in Site Trunking

Site trunking occurs when a site is not longer able to participate in wide-area calls controlled by the zone controller. Radios operating in site trunking can only communicate with other radios at that site.

The radio will of course always be looking for a wide-area trunking site to lock onto if it roams into range of one.

1. When a site goes into site trunking, the radio will receive this indication and will display

"SITE TRUNKING"

2. The display will alternate between the current trunked mode and the site trunking display for as long as the radio remains in site trunking.
3. Users should have a pre-determined backup Tower site when the System is in Site Trunking.

Tower prefixes

HO = Houston Tower
HU = Huffman Tower
TO = Tomball Tower
CL = Clodine Tower
AL = Alvin Tower
TM = Tamina Tower

Harris County ITC

XTS 5000
Portable
Radio

USER GUIDE
Law Enforcement Model



Harris County Regional Radio Center
2500 Texas ave
Houston, Texas
77003


Phone: 713-755-6037
Fax: 713-755-8941

STATUS SYMBOLS




-  I-TAC DIRECT
-  SCAN SYMBOL
-  BATTERY LEVEL BLINKS WHEN LOW
-  RSSI - RECEIVED SIGNAL STRENGTH
-  HOME BUTTON
The Home button always returns you to the Default Display.
"Not User Programmable"

REMOVING BATTERY

Release Button is located on the bottom of the battery

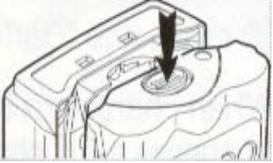

Removing battery
Lift the battery up and away from radio

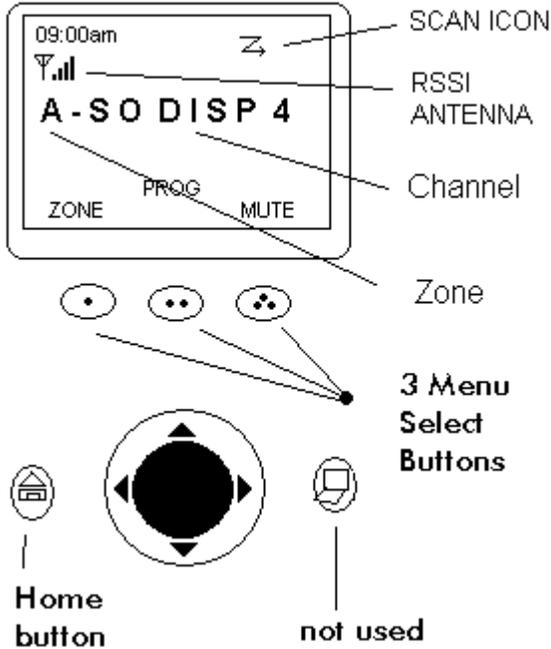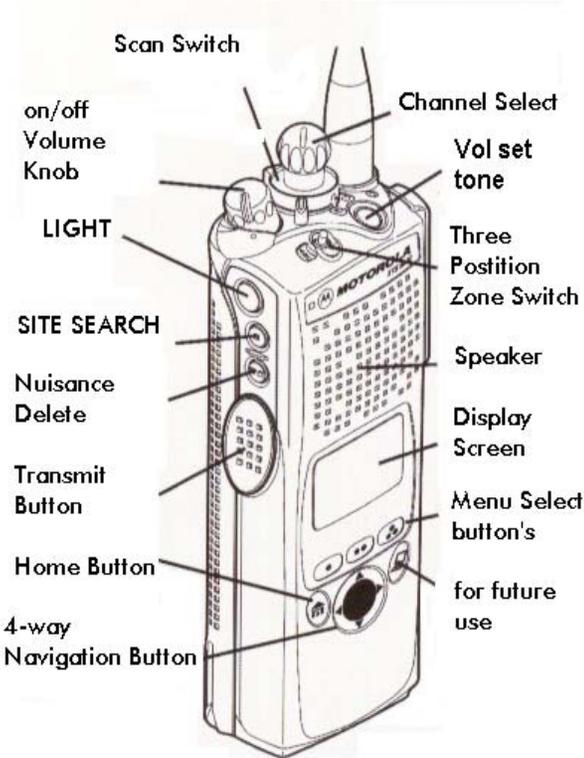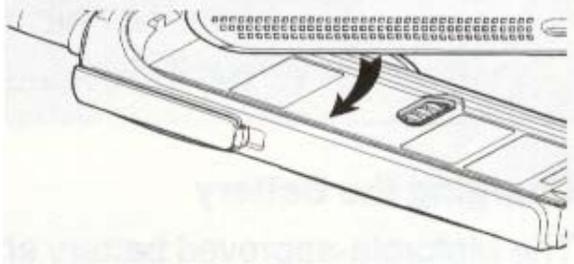

NOTES:
When charging a battery attached to a radio, turn radio off to ensure a full charge.
DO NOT replace the battery in any area labeled "Hazardous Atmosphere"

NOTE:
If your Radio is programmed with volatile -key Retention, encryption keys will be retained for Approximately 30 seconds after battery removal.

Attaching battery
With the radio turned off, insert the top edge of the battery into the radio's frame as shown below. Press and Snap battery in place. You will hear a click when the battery locks.

